

## **SPEEDMASTER**

DATE / DAY-DATE CHRONOGRAPH 40 MM DATE Steel on steel

Caliber 3304

### 323.10.40.40.02.001

- Automatic
- Chronometer
- Tachymeter
- Sapphire crystal
- Anti-reflective treatment
- 2-year International Warranty
- Water-Resistant to a relative pressure of 10 bar (100 metres/330 feet)



## WATCH FUNCTIONS

The crown has 3 positions:

**1. Normal position (wearing position):** when the crown is positioned against the case, the crown ensures that the watch is water-resistant.

**Occasional winding:** if the watch has not been worn for 44 hours or more, wind it up with the crown in position 1.

2. Correcting the date: press the corrector (C) at 10 o'clock.

NB: the date cannot be corrected between 8:30 pm and 1 am.

**3. Time setting:** hours – minutes – seconds. Pull the crown out to position 3. The seconds hand will stop. Turn the crown forwards or backwards. Synchronise the seconds by pushing the crown back to position 1 to coincide with a given time signal.

## **CHRONOGRAPH FUNCTIONS**

- Pusher A: start stop, start stop, etc Timing to 1/8 of a second for up to 12 hours.
- Pusher B: reset (after a stop).

Note: resetting/zeroing of the sub dials must only be carried out after the chronograph has stopped.



# **TACHYMETRIC SCALES**

The desired information is read between the central seconds hand of the chronograph and the corresponding scale, over a maximum duration of 60 seconds.

Example: calculating the speed of a car.

Record the time the car takes to cover a distance of 1 kilometre. Read off the tachymetric scale the speed indicated by the central seconds hand. In this case, the car is travelling at  $120\ \text{km/h}$ .

