

### **SPEEDMASTER**

MOONWATCH CO-AXIAL CHRONOGRAPH 44.25 MM Steel on steel

Caliber 3313

#### 311.30.44.50.01.001

- **®** Co-Axial escapement
- Automatic
- Chronometer
- Tachymeter
- Sapphire crystal
- Anti-reflective treatment
- Sapphire crystal case back
- Numbered Edition
- 3-year International Warranty
- Water-Resistant to a relative pressure of 10 bar (100 metres/330 feet)



### WATCH FUNCTIONS

The crown has 3 positions:

**1. Normal position (wearing position):** when the crown is positioned against the case, the crown ensures that the watch is water-resistant.

Occasional winding: if the watch has not been worn for 44 hours or more, wind it up with the crown in position 1.

**2. Correcting the date:** pull the crown out to position 2, turn the crown forwards, then push the crown back to position 1.


NB: the date cannot be corrected between 8:30 pm and 1 am.

3. Time setting: hours – minutes – seconds. Pull the crown out to position 3. The seconds hand will stop. Turn the crown forwards or backwards. Synchronise the seconds by pushing the crown back to position 1 to coincide with a given time signal.

# **CHRONOGRAPH FUNCTIONS**

- Pusher A: start stop, start stop, etc Timing to 1/8 of a second for up to 12 hours.
- Pusher B: reset (after a stop).

Note: resetting/zeroing of the sub dials must only be carried out after the chronograph has stopped. Never push the chronograph's two pushers (A and B) simultaneously.

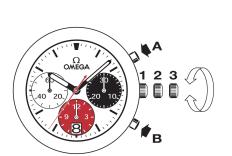

## **TACHYMETRIC SCALES**

The desired information is read between the central seconds hand of the chronograph and the corresponding scale, over a maximum duration of 60 seconds.

Example: calculating the speed of a car.

Record the time the car takes to cover a distance of 1 kilometre. Read off the tachymetric scale the speed indicated by the central seconds hand. In this case, the car is travelling at  $120\ \text{km/h}$ .

